INSTALLATION INSTRUCTIONS

FAUCET AERATOR


These highly efficient faucet aerators save water and the energy used to heat the water. They can improve faucet performance, may be used on most kitchen or bathroom faucets, and cut water flow up to 50%!

Step 1: Remove the old aerator with pliers or wrench by turning counterclockwise. Use a cloth to protect the finish from scratching.

Step 2: Clean off the faucet threads. This aerator is dual threaded to fit both female and male standard size faucets. For inside threaded (female) faucets, place two rubber washers in the top of the aerator and screw aerator into inside threads.

For outside threaded (male) faucets, place one rubber washer in the top of the aerator and screw aerator into outside threads.

Step 3: Tighten finger tight. If the aerator leaks, use pliers or a wrench to gently tighten, using a cloth to protect the finish.

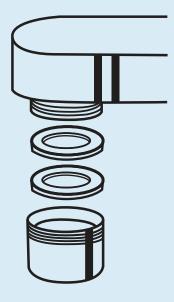

In rare instances an adapter may be needed. For more information on this and other water and energy saving products, visit our website at www.amconservationgroup.com

These faucet aerators are WaterSense listed and meet AB1953 requirements.





INSTALLATION INSTRUCTIONS

WALL-MOUNT SHOWERHEAD

Unbelievable, consistent water pressure from a high-efficiency showerhead. Product saves water and the energy required to heat the water.

To Install:

- 1. Remove old showerhead from the shower arm by turning it counterclockwise.
 - 2. Before installing the new showerhead, clean the shower arm threads.
 - 3. Turn on the water to wash out the pipe. TURN OFF WATER.
 - 4. Apply a few layers of plumber's tape directly to the shower arm threads in a clockwise direction to create a watertight seal.
 - 5. Check that the screen washer is seated firmly into the showerhead before tightening.
- 6. Hand tighten the showerhead onto the shower arm. DO NOT OVERTIGHTEN.

To Clean:

Unscrew showerhead and remove foreign particles. Soak nozzle in hydrogen peroxide or vinegar.

