


Proper Window Installation

- ASTM E 2112 Standard Practice for Installation of Exterior Windows, Doors, and Skylights OR Manufacturers Directions
- Sloped sub-sill or beveled siding filler
- Flexible pan and up the sides
- Overlaps and drip cap
- Caulk and seal corners
- Double check your rough openings against actual unit dimensions.

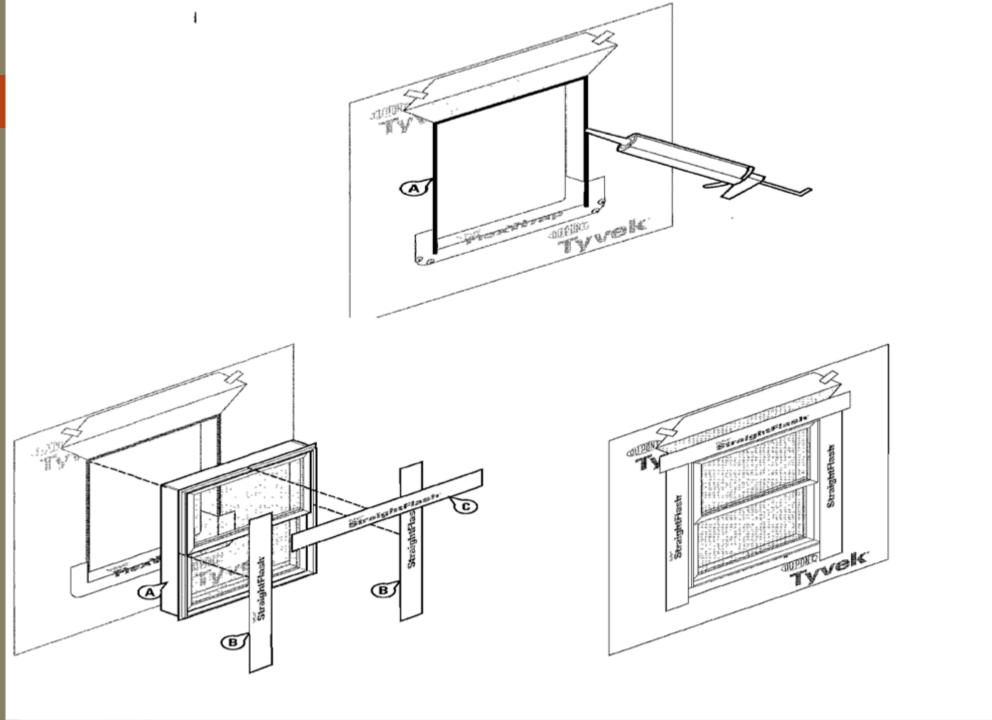

€.

-



Air Barrier And Vapor Diffusion Retarder


- Air Sealing Techniques
- Sealed Receptacles, Wires, Pipes, And Perforations
- "Flanged" Boxes
- Tapes And Sealants
- Airflow not vapor diffusion is the main source of moisture transmission

Air Sealers







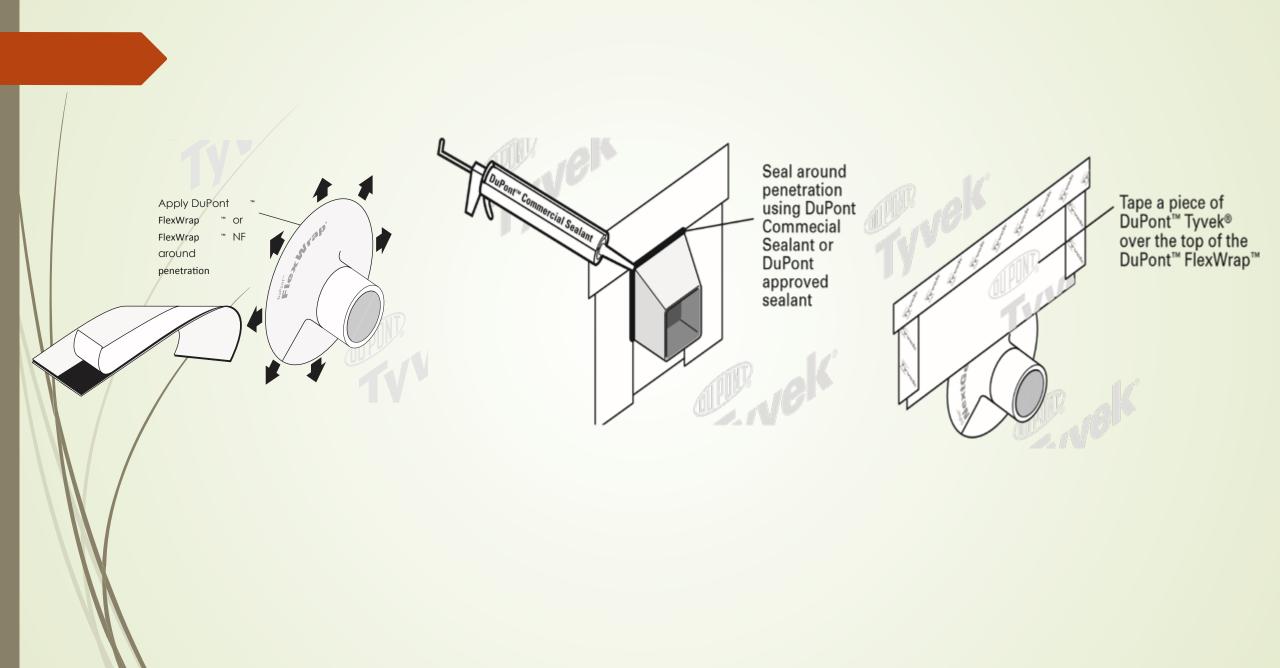









Wall Choices

- Fiberglass batts most expensive!
- Rock wool
- Closed cell foam
- Open cell foam
- Cellulose
- Fiberglass BIB
- Smart Vapor Retarder































